



#	SITUATION	DESCRIPTION	ACTION
1	A WATER LEAK HAS BEEN DETECTED. ON THE CONTROLLER, WE CAN HEAR A BEEPING SOUND AND ONE OF THE LED LIGHTS (1, 2 OR 3) IS LIT	The water leak sensors have detected a water leak and the AKWA valve has been closed. The LED lights corresponding to the zone is lit (1, 2 or 3), and we can hear a beeping sound (at 1 second intervals)	<ol style="list-style-type: none"> 1. Locate the water leak, in the appropriate zone. For information: ZONE 1 = bathrooms, toilets, etc. ZONE 2 = kitchen, fridge, etc. ZONE 3 = hot water tank, washing machine, etc. 2. Once the leak is cleaned up, press the RESET button to reboot the system. When you reboot the system, there are 2 possible scenarios: The leak sensor is dry and the puddle is eliminated. In this scenario, the beeping sound will stop and the valve will reopen. The leak sensor is still in a water puddle. In this scenario, the sensor is still in contact with water, and the water leak needs to be eliminated. Once the sensor is dry (leak has been eliminated), press the RESET once more, and the valve will reopen.
2	I WANT TO CLOSE THE VALVE**	The system is in normal mode and there are no alarms. You simply want to close the valve, as this will always be the best protection available to avoid possible leaks.	Press the CLOSED button to close the valve. When you will press this button, the LED light will flash.
3	THE LED LIGHT ON ZONE 4 FLASHES FROM TIME TO TIME	Zone 4 is reserved for the vacancy sensor(s). If no movement is detected for a preset amount of time (2, 4, 8 or 12 hours, according to the programmed configuration), the valve will be closed. When a movement is detected, the LED light will flash and the timer is reset to zero.	NONE

LEGEND

- A.** ZONES : each zone can have 4 zones, for a total of 16 sensors
- B.** ZONE 4 : zone 4 is reserved for the vacancy sensors
- C.** OPEN : In 'OPEN' mode, water is available

- D.** CLOSED: In 'CLOSED' mode, water is not available
- E.** PROGRAM: DO NOT TOUCH this button. This function is reserved for installers
- F.** RESET : this button is used to reset and restart the system when a leak is detected

NOTE:

** IMPORTANT: if the plumber wants to do some renovations, make sure that they close the main manual valve located at the entrance of the house.